

Saturn HSD High Speed Data Function – Installation Check List

The check list is an aid in securing that all necessary settings have been made following the installation of the function. *References are made to the Saturn B Data Service – Operator's Manual.*

Ref No	Action	Function	No	Comments/settings
1 <input type="checkbox"/>	Key in HSD function "Opening Key".	SET USER LEVEL	12	See "Renter/Owner Level – Optional Functions".
2 <input type="checkbox"/>	Change to "Owner Level"	SET USER LEVEL	12	See " USER LEVEL " below.
3 <input type="checkbox"/>	Activate HSD function	ENHANCED SETUP	89	See "Activating the HSD Function".
4 <input type="checkbox"/>	Set end terminal service	CONFIGURE PORTS	70	See "Configuration – Selecting HSD End Terminal Service".
5 <input type="checkbox"/>	Set routing of incoming calls	INCOMING CALL ROUTE	71	See "Configuration – Routing HSD to DTE Port".
6 <input type="checkbox"/>	Configure the HSD Port	HIGH SPEED DATA CONFIG	85	See "Configuration – Setting the HSD Port".

USER LEVEL

The "Owner Level" is selected with the "**SET USER LEVEL**" function no. 12. (See "Renter/Owner Level").

Owner level is set by keying **4** when selecting level, and entering the default password **123456** when prompted. (*1=user level, 2=operator level, 4=owner level*).