

# SATURN B – TELEX DISTRESS CALL

## TRANSMISSION

1 Turn on the telex PC and type SATB on the keyboard to start the program.

2 Press **T** to activate the telex mode.

3 Lift flap over **DISTRESS BUTTON**.

**Press and hold down DISTRESS BUTTON for at least 6 seconds.**

### Reception:

**ACKNOWLEDGE PUSH BUTTON**

**ALARM INDICATOR**

**ALARM BUZZER**


### Transmission:

*Indicator flashes slowly, then quickly after 6 seconds*



4 A list of LESs appears on the screen.

Use arrow keys **↓** **↑** to select LES, and press **↵** **R**.

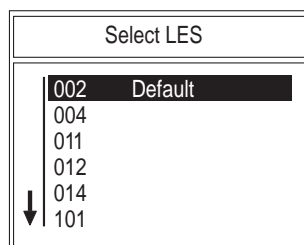

5 Press **F8** to send Distress Message.

6 Follow the instructions from the RCC Operator, and when requested, press **F9** to clear the call and await further instructions.

7 Keep the line clear so that the RCC can call you back when necessary.

## RECEPTION

- The **ALARM BUZZER** and **ALARM INDICATOR** are activated when a distress call is received.
- The **ALARM BUZZER** may be stopped locally by pressing the **ACKNOWLEDGE PUSH BUTTON**. Does not stop buzzer on other Distress Alarms, if installed.
- The message is displayed on the Telex PC and printed out on the printer.